



Lamp Date Codes

This code applies to all Crompton lamps made at Guiseley and Nox Factories. It consists of a number which represents the week, month and year of manufacture. The code runs from 1 to 96 on a 2 year cycle.

Even Years	Week 1	Week 2	Week 3	Week 4
January	1	2	3	4
February	5	6	7	8
March	9	10	11	12
April	13	14	15	16
May	17	18	19	20
June	21	22	23	24
July	25	26	27	28
August	29	30	31	32
September	33	34	35	36
October	37	38	39	40
November	41	42	43	44
December	45	46	47	48
Odd Years	Week 1	Week 2	Week 3	Week 4
January	49	50	51	52
February	53	54	55	56
March	57	58	59	60
April	61	62	63	64
May	65	66	67	68
June	69	70	71	72
July	73	74	75	76
August	77	78	79	80
September	81	82	83	84
October	85	86	87	88
November	89	90	91	92
December	93	94	95	96

Outer Boxes are also coded as follows:

1 st digit	Shift 1/2/3
2 nd digit	Day of week 1-5
3 rd /4 th digits	Week of year 1-53
4 th /5 th digit	Year eg. 4 = 1994, 7 = 1987